





Example1: Set internal clock current time 4:30pm. eXtel is on extension 202

		202	*1234*	80 #	1630 #
	Dial ext.	Admin code	Operation code	Current time	

Example2: Set dialled ext. 201 on eXtel button press. eXtel is on extension 202

		202	*1234*	71#	201 #
	Dial ext.	Admin code	Operation code	extension	

Open Door – answer phone and press **0** .

Mic. Volume – answer phone and press **4** – 4 volume modes.

Spk Volume – answer phone and press **6** – 4 volume modes.

Initiate a call to the Panel – lift handset and dial the panel extension.

Connection and operation guide

eXtel


Extension Door Phone

Programming

Program from any extension of the PBX. Dial the panel , on panel reply press:
 * admin code * operation code # value # . Default admin code is 1234


Operation description	code	Default value	Program sequence of panel connected to extension 202 → → →
Change admin code	00	1234	202 *1234* 00 # ???? #
Dialled extension	71	0	202 * 1234* 71 # ??? #
Dialled extension (night mode)	72	0	202 * 1234* 72 # ??? #
N.O relay active duration (s)	73	04	202 * 1234* 73 # ?? #
Activation delay of relay when external button pressed	74	01	202 * 1234* 74 # ?? #
Limit talk time with eXtel (s)	76	60	202 * 1234* 76 # ?? #
Set internal clock time (24 hour format 1600 = 4pm)	80	off	202 * 1234* 80 # ???? #
Define night mode time (start time * end time)	81	off	202 * 1234* 81 # ?????*???? #
Reset all (less admin code)	91		202 * 1234* 91 # 99 #
Reset admin code			202 * 4848* power off & on
Activate night/day mode		off	202 * 1 *
Cancel night/day mode		off	202 * 2 *

Connection to Board

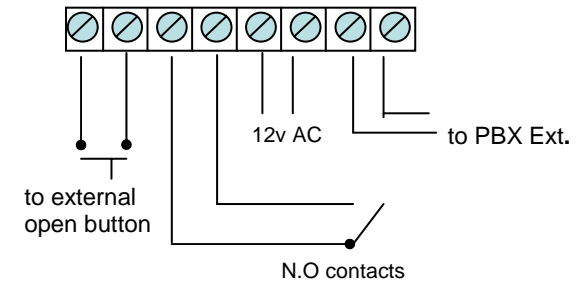

Name change

Remove screw as shown and
remove black plastic cover.

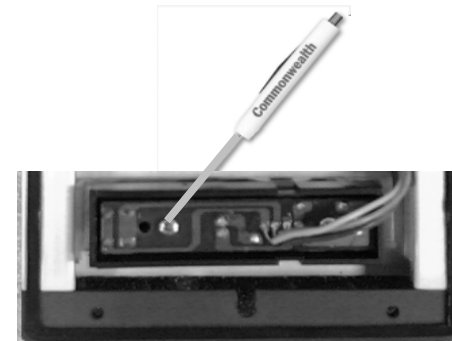

Electric lock connection

