 
 




Operating instruction - pal 102DRT




Door opening



  
Call waiting






To initiate call to the door or gates panel 1

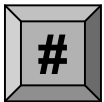

 To initiate call to the door or gates panel 2



   All the Phones will ring again for somebody else to pick up



Intercom on the same line